Ultralite Storage Room

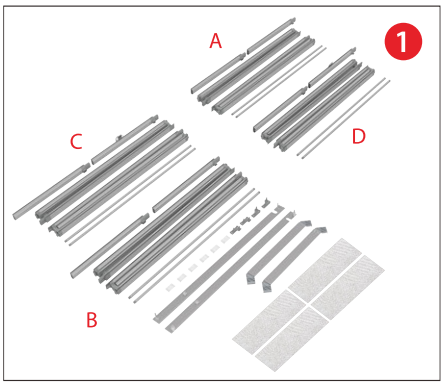

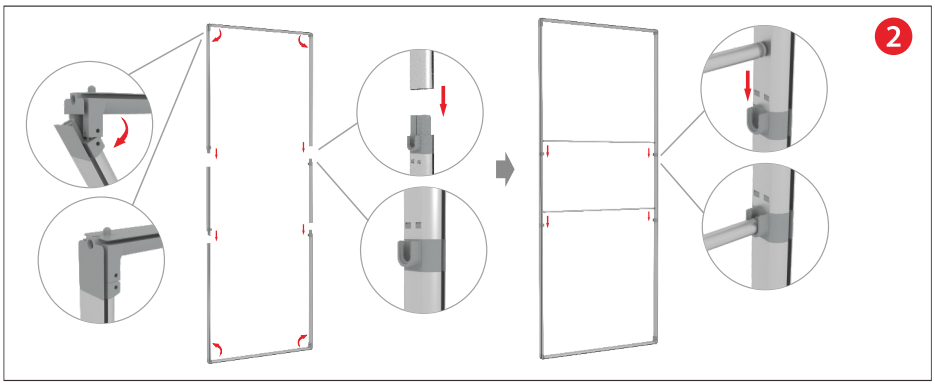

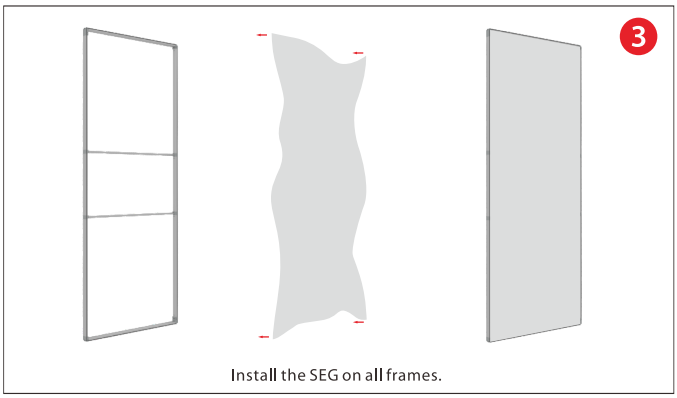

Install the SEG on all frames.

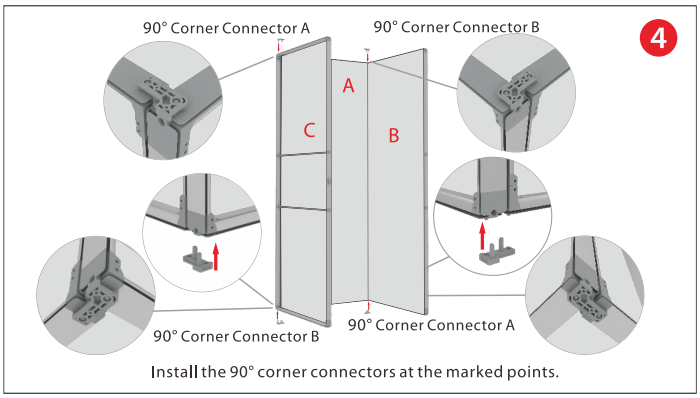

Install the 90° corner connectors at the marked points.

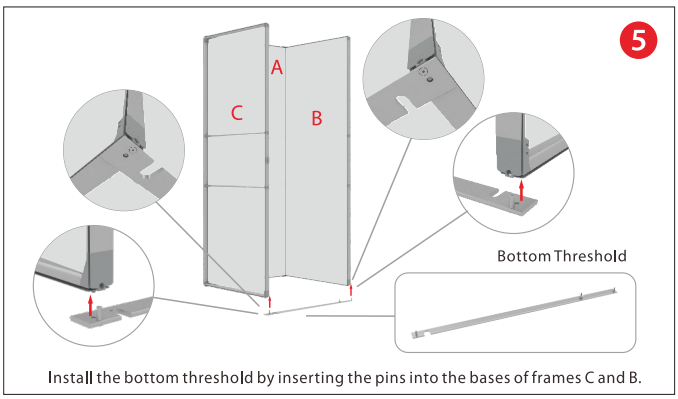

Install the bottom threshold by inserting the pins into the bases of frames C and B.

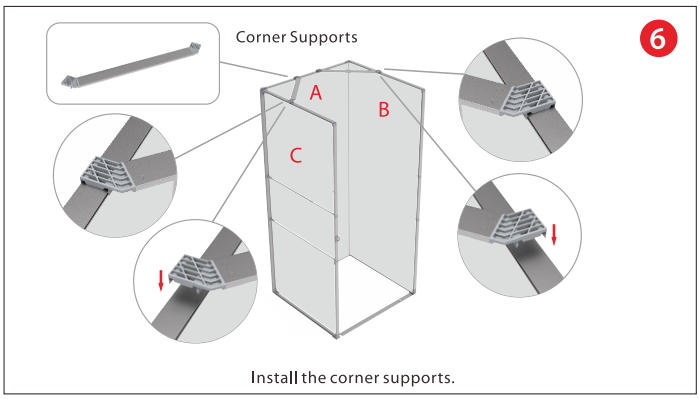

Install the corner supports.

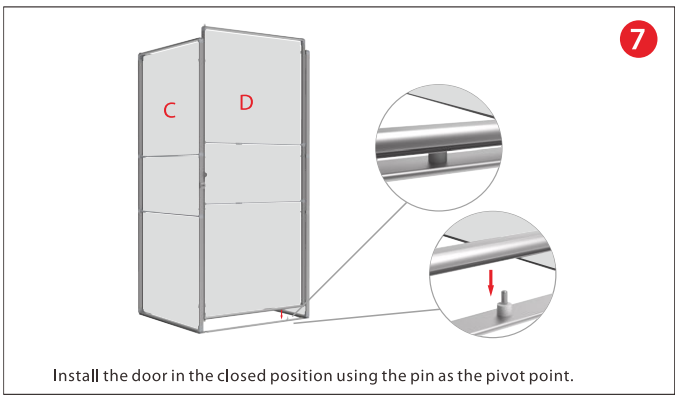

Install the door in the closed position using the pin as the pivot point.

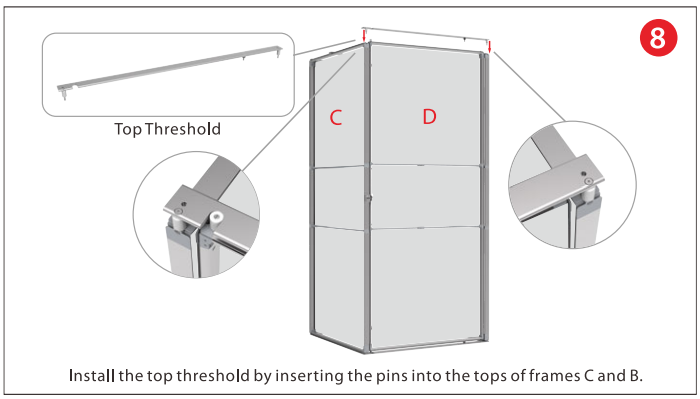

Install the top threshold by inserting the pins into the tops of frames C and B.

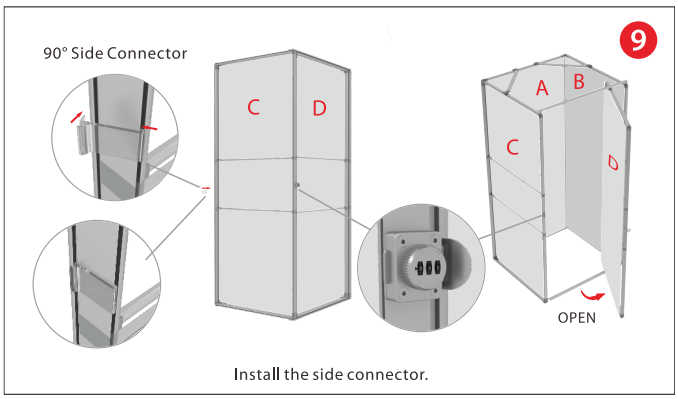

Install the side connector.

How To Change Lock Code

Initial Lock Code: 000

1. Locate the hole on the bottom of the lock.

2. Insert a thin object, such as a paperclip, into the hole and keep it inserted throughout the entire code-changing process.

3.Select a new code, then remove the thin object.

4. Scramble the lock.

Note: Be sure to remember your new code.
You may repeat these steps at any time using a thin object to reset the code.