


# BT-LIT


## Instructions




1. Remove the Lit panel and installation hardware from the box.

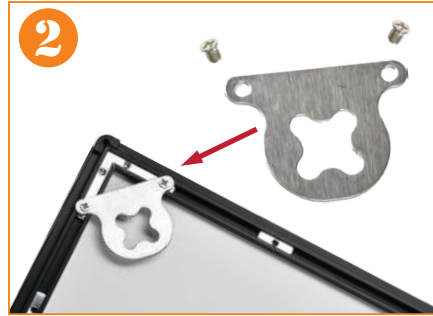


2. Use the supplied shorter screws to attach the mounting brackets to all four corners of the panel.

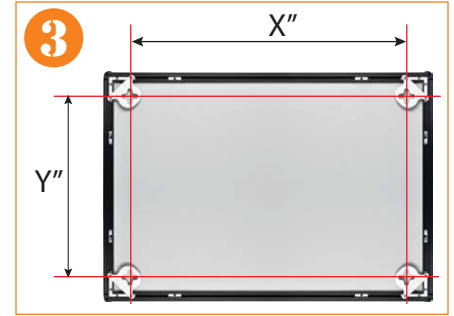

3. Measure the distance between the center of the bracket holes according to the diagram. Mark these measurements on the wall for hanging.

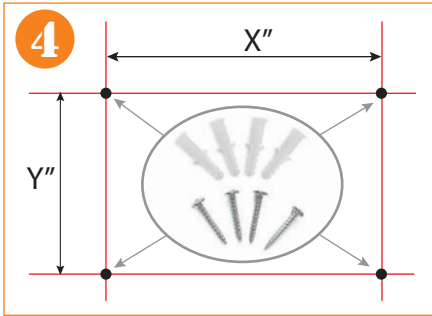

4. Drill four holes into the wall at the marked locations. Install the longer hanging screws and drywall anchors (if needed).

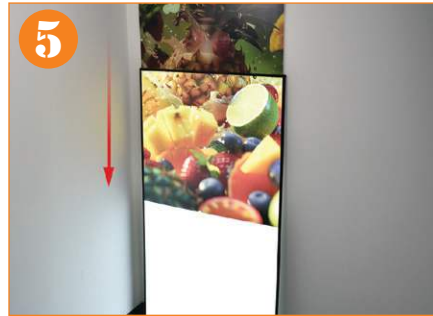

5. With the panel on the floor, slide the backlit graphic in from the top (portrait) or side (landscape). The Lit panel supports backlit film up to 10mil thick.



6. Hang the panel on the wall and plug in the UL-certified power cable

