Ultralite with Extension Instructions 8X8FT

1

Ultralite Frame

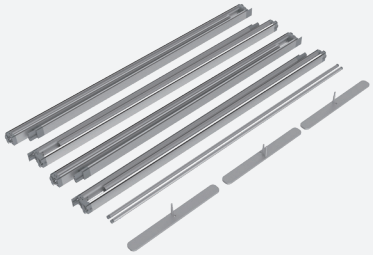

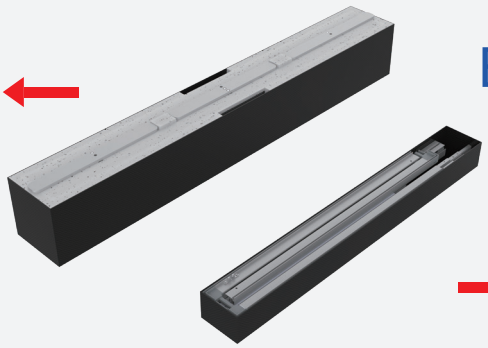

Extension Frame

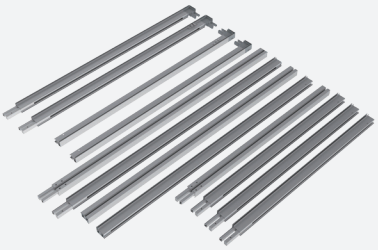

Open the bags and remove all parts.

2 Ultralite Frame

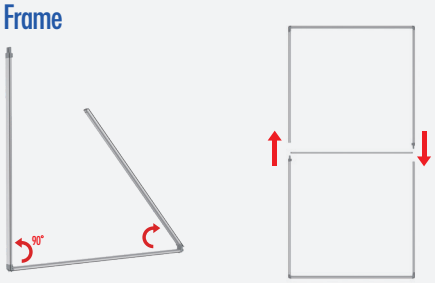

Gently open the top and bottom vertical bars until they are at a 90 degree angle from the horizontal top and bottom bars. Insert the middle horizontal bar and securely connect all three parts together.

3 Ultralite Frame

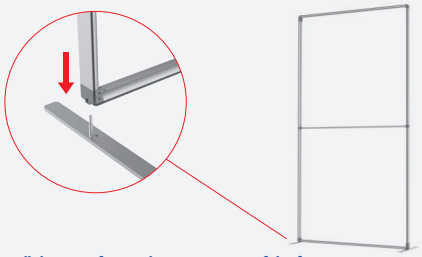

Install the 1-pin foot to the outer corner of the frame.

4 Ultralite Frame

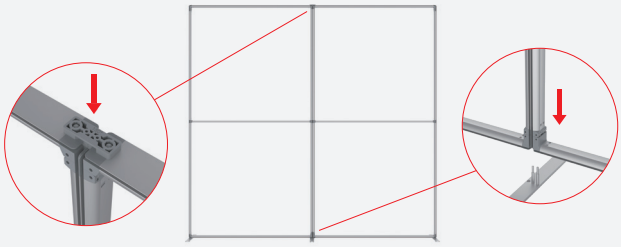

Connect the two ultralite frames using the 2-pin foot on the bottom and the top connector.

5 Extension Frame

Match the symbols on the poles, then screw them together.

6 Extension Frame

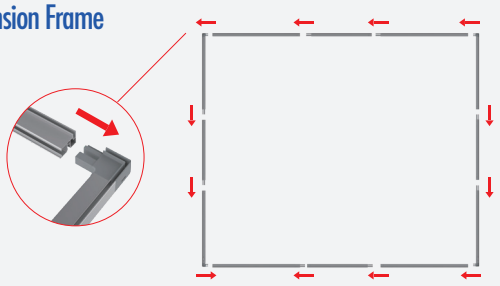

Continue aligning the matching symbols and screw the poles together.

7 Extension Frame

Completed frame.

8 Ultralite Frame and Extension Frame

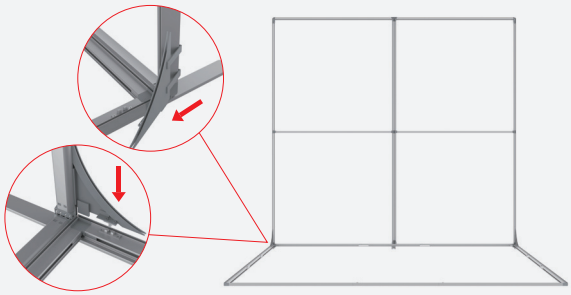

Connect the back frame to the ground frame using the left and right brackets.

9

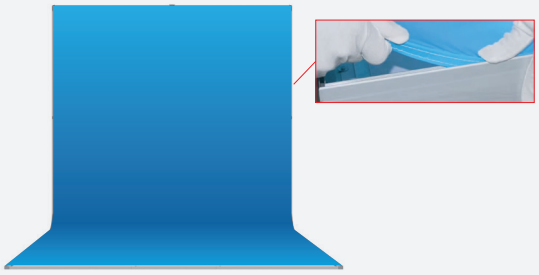

Install the SEG beginning with the top corners, then the bottom corners, followed by the top middle, and finish with the bottom middle.